# TE COOLER

## TEA Datasheet DA-XX-24-152-350-020

## Discription

- DA(Direct to Air) Series Cooler, also called Cold plate coolers, The cold end is a metal plate (usually aluminum plate), which the object can be attached directly to the cold plate. The hot end is a heat dissipation method using a radiator and fan.
- The direct contact allows the heat to be efficiently conducted to the thermoelectric (Peltier) modules. This keeps the system operating as efficiently as possible and improves the stability and accuracy of temperature control.
- DA Coolers are used to cool equipments, and also to provide low-temperature platfor

## Feature

- High reliability design
- Compact design, easy to installation
- DC operation
- High cooling efficiency
- Support customization

## Application

- Medical diagnostics
- Analytical instrumentation
- Industrial instrumentation
- Photonics laser systems
- Environmental Protection Equipment

(5) The length of the Cooler

⑦Internal code

## Naming rules

## DA1-XX2-243-1524-3505-XX6-0207

Product type
working voltage

②Cooling capacity at 0°C temperature difference.

④The width of the Cooler

6 electric power of the Cooler

## **Physical figure**



picture fo reference only




## **TEA Datasheet**

#### DA-XX-24-152-350-020

### **Peformance Specification**


Cooler Model	DA-162-24-152-350-180				DA-183-24-152-350-223				DA-206-24-152-350-266			
Cooling power Qcmax(W)	162				183				206			
Nominal Voltage(V)	24											
Max Voltage(V)	26											
Running current(A)	7.5				9.3				11.1			
Lowest tem (RT= 25 °C)	-5				-4							
Startup 1/2/3/5 min (°C)	12	7	2	-3	10	4	0	-2				
Startup current(A)	9.0				11.2				13.3			
AC adapter 24V	12A				13A				15A			
Power Input(W)	180				223				266			
COP(dT=0)	90%				82%				77%			
MTBF (fans – hrs)(h)	40000											
Dimensions(mm3)	W*L*H				152X350X88							
Weight(Kg)	3.6											
Performance tolerance	±10%											
Operating tem(°C)	-10 to 50 °C											
Please refer to the performar	nce cur	ves bel	ow for	the coo	oling ca	pacity	under o	differen	t tempe	erature	e differ	ences.
All performance indicators are te	ested un	der con	ditions	of ambie	ent temp	erature	of 25 °C	and go	od vent	ilation	at the h	ot end.
Internal code	DA35043172301				DA35045062501							

## **Performance Curves**

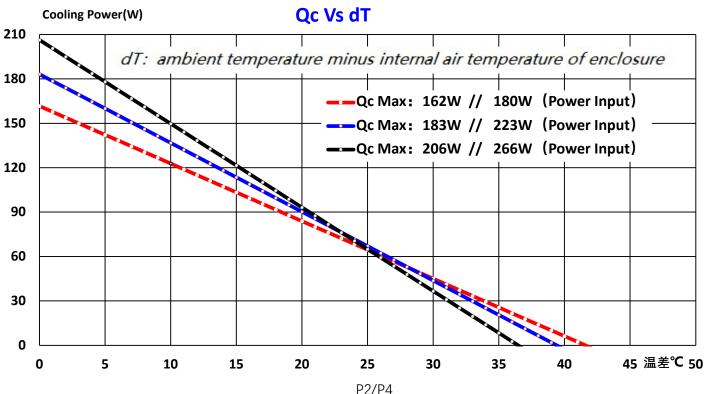



## **Dimensions and Installation drawing**

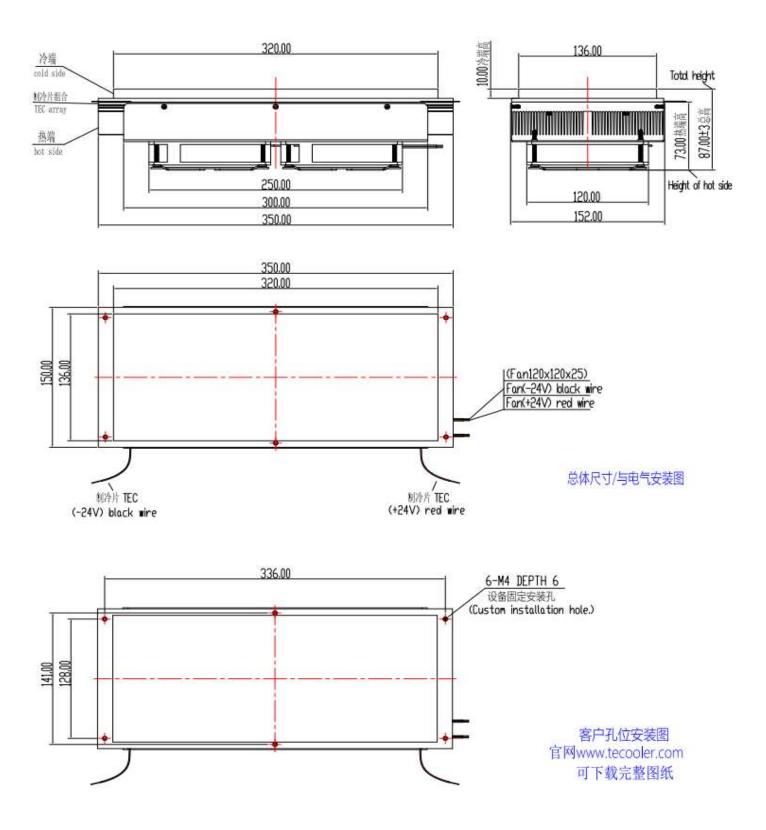

# 

## **TEA Datasheet**

DA-XX-24-152-350-020

## Notices of installation and operation

- Please make sure that no collision or oscillation will happen during the process of transportation and operation to avoid the damages to the components.
- The product must be installed in the environment with good ventilation. It is suggested that the equipment should normally operate for 30 minutes before the formal use.
- The standard product should only be used indoors. Please contact the sales staffs of our company if you need to use it outdoors.
- Please make sure that the input voltage should not exceed the maximum voltage specified in the column of performance parameters.
- It is suggested that the function of thermoelectric cooler shutdown in the case of fan damages should be added to the circuit.
- It is suggested that the fan should be cleaned and maintained on an annual basis. Please cut off the power before any abnormal operations.
- Please do not touch the product when the Cooler is working. The cooling end may result in freezing injuries, and the heating end may lead to scalds in some cases.
- The product, the fan and the thermoelectric cooler adopt the same voltage when all red wires are connected to the positive pole and all black wires are connected to the negative pole.
- All performance indicators are tested in the environment with good ventilation at the heating end. If the ventilation at the heating end is not ideal, the performance may be influenced.

## Related accessories (to be purchased separately)

- DC switching power supply
- Temperature controller

## **Contact information**

Website : http://www.tecooler.com/en/index.html

E-mail: 13631671636@163.com